



STRIP WIRES TO APPROXIMATELY 5/8" FROM END.

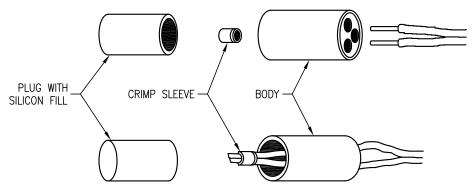

INSERT WIRES THROUGH HOLES IN BASE OF BODY

TWIST STRIPPED WIRES TOGETHER AND APPLY CRIMP SLEEVE WITH AN INDENT TYPE CRIMPING TOOL.



PUSH WIRES BACK INTO BODY. INSERT PLUG INTO BODY UNTIL IT SNAPS TIGHT.

NOTES:

- 1. ONE CONNECTOR WILL HANDLE #10, #12 AND #14 AWG WIRES.
- 2. WIRE CONNECTOR WILL ACCEPT TWO OR THREE WIRE CONNECTIONS.
- 3. MANUFACTURED BY SPEARS, MODEL DS-400, OR APPROVED EQUAL.

The Mission city with

DATE

DRAWN BY: K. TRAN

CHECKED BY: C. QUANZ

APPROVED BY: G. GOMEZ

OCTOBER 2013

LOW VOLTAGE IRRIGATION WIRE CONNECTION

LS-22

CITY OF SANTA CLARA

PAGE: 78