


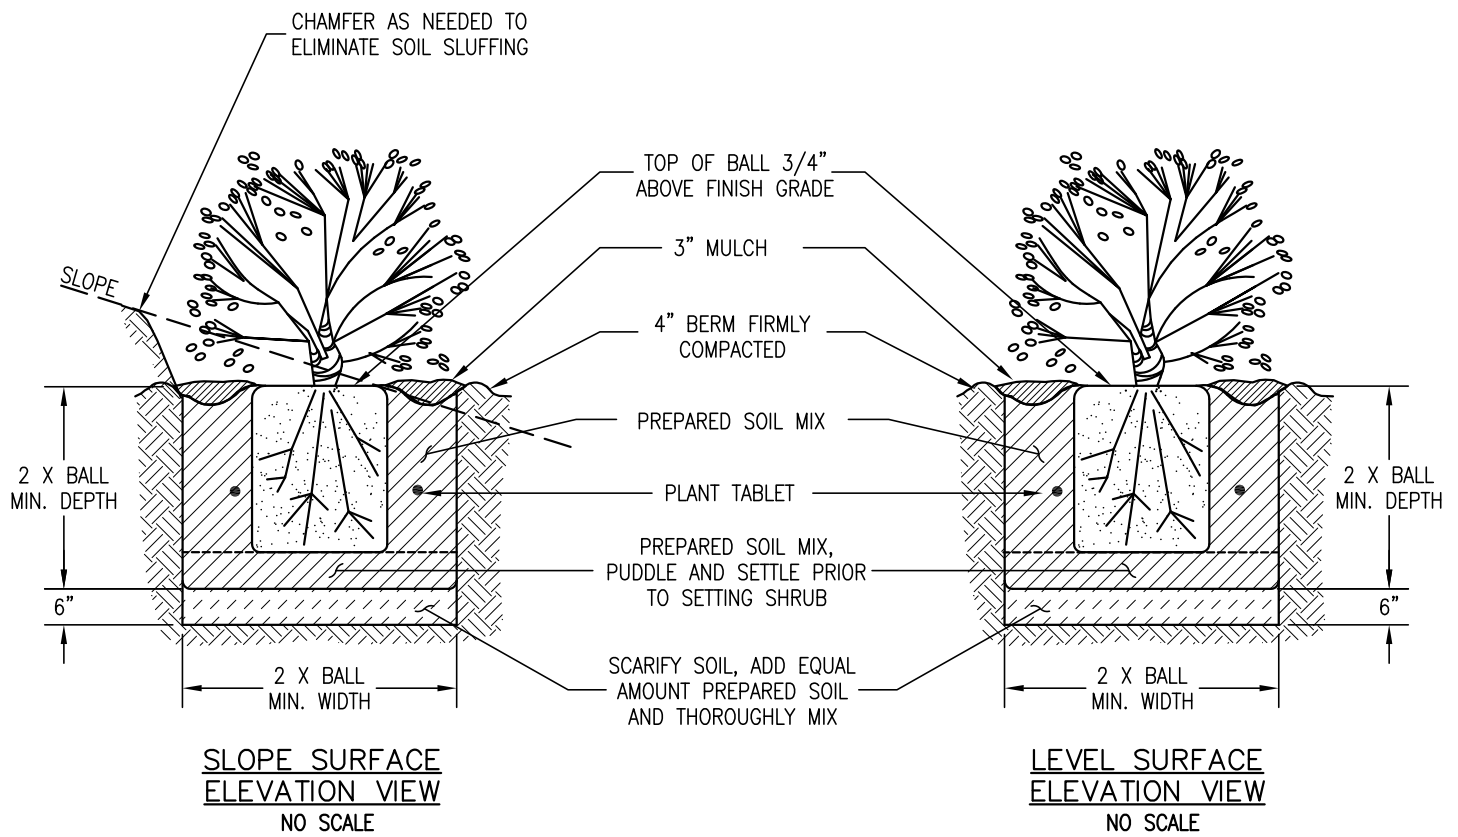

NOTES:

1. CONTACT UNDERGROUND SERVICE ALERT (USA) AT (800) 642-2444 AT LEAST 5 DAYS PRIOR TO BEGINNING EXCAVATION WORK TO LOCATE EXISTING UTILITIES.
2. BUILD SOIL BERM MIN. 4" HIGH AND 3' FROM SHRUB TRUNK IN PLANTER STRIP. PROVIDE LOAM TOPSOIL NEEDED TO FORM BERM AND FILL HOLES.
3. SOIL, CONCRETE AND OTHER MATERIALS SPILLED ON STREET, SIDEWALK, AND PLANTING AREA SHALL BE CLEANED UP IMMEDIATELY BY CONTRACTOR.
4. IF TREE PLANTING IS DELAYED AFTER TREE WELLS ARE CONSTRUCTED, HOLES WILL BE FILLED IN WITH SOIL UNTIL TREES ARE AVAILABLE.
5. SHRUB PLANTING PIT DRAINAGE TEST TO BE CONDUCTED AT 3 DIFFERENT LOCATIONS ON SITE. TEST TO BE: AUGER HOLE 18" DEEP 6" DIA., FILL WITH WATER, LET DRAIN, FILL WITH WATER AGAIN AND HAVE CITY ARBORIST ON SITE TO REVIEW DRAINAGE AND MAKE ANY NECESSARY RECOMMENDATIONS AT THAT TIME.



DRAWN BY: K. TRAN

CHECKED BY: C. QUANZ

APPROVED BY: G. GOMEZ

DATE: OCTOBER 2013

SHRUB PLANTING

CITY OF SANTA CLARA

LS-5

PAGE: 61